

MEDION®

25,4 cm/10" Tablet

MEDION® LIFETAB® P9514 (MD 99000)



 N26968

LIFETAB®

Manual



MEDION®

10" Tablet

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 24 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

After Sales Support

Telephone: 1300 884 987

Internet: www.medion.com.au





MEDION®

10" Tablet

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. **We recommend you save this data elsewhere prior to sending the product for repair.**

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1 300 884 987 or write to us at:

MEDION Australia Pty Ltd
St. Leonards, NSW 2065
Australia

MEDION Help Desk 1 300 884 987
(Operating Hours : Mon-Fri 08 :30AM to 06 :00PM EST)
Email: Australia@medion.com

After Sales Support

Telephone: 1300 884 987

Internet: www.medion.com.au



Table of Contents

Safety and Maintenance	1
Safety Instructions	3
Ambient Temperature.....	4
Connecting.....	5
Power Supply.....	5
Cabling	5
Information about the Regulatory Compliance to R&TTE.....	6
Views & Handling	7
Included with Your Tablet.....	9
Views.....	10
Front Side	10
Rear Side.....	11
Top Side	11
Bottom Side.....	11
Left Side.....	12
Getting Started	13
First steps	13
Configuring your Google Account.....	13
Short Description of the Home Screen	14
Main Components.....	15
Power Button.....	17
Powering On your Tablet.....	17
Powering Off your Tablet.....	17
Setting the Tablet into standby mode	17
Waking up from Standby Mode.....	18
Adjusting Screen Lock Pattern Settings.....	18
Auto Shutdown	19
Power Adapter.....	19
How to Assemble the Power Adapter	19
Battery Operation	20
Charging the Battery	20
Multi Connector	21
Operating the Tablet	21
Switching Home Screens	22
Making/Checking Settings	23
Market.....	24
Using Non-Market Applications	24
SIM Card.....	25
Inserting SIM Card	25
Connecting to the Internet	26
Main Settings.....	26

Adding a New GPRS/3G/EDGE Connection.....	27
Activating/Deactivating 3G.....	27
Activating/Deactivating Wi-Fi.....	28
Adding Wi-Fi Network.....	28
The microSD Card Slot.....	29
Inserting microSD Cards.....	29
Accessing the microSD Card Contents.....	30
Removing microSD Cards.....	30
Help.....	31
Customer Service.....	33
Additional Support.....	33
Maintenance.....	33
Repairs.....	33
Recycling and Disposal.....	34
Appendix.....	35
Information about Conformity.....	37
ISO 13406-2 Class II.....	37
FCC Compliance Statement.....	39
Copying This Manual.....	39
Index.....	40

Copyright © 2011

All rights reserved.

This manual is protected by Copyright.

Trademarks:

All trademarks are the property of their respective owners.

Medion® makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Medion® shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Medion® assumes no responsibility for the use or reliability of its software on equipment that is not furnished by **Medion®**.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of **Medion®**.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

The information in this document is subject to change without notice.

Chapter 1

Safety and Maintenance

Subject	Page
Safety Instructions	3
Ambient Temperature	4
Connecting.....	5
Power Supply.....	5
Cabling	5
Information about the Regulatory Compliance according to R&TTE.....	6

Safety Instructions

Please follow the instructions in this section for the safe operation of your Tablet:

- Do not allow small children to play unattended with electrical equipment. Children are incapable of judging potential risks properly.
- Keep the packing materials, such as plastic away from children. The danger of suffocation could arise in the case of misuse.
- Do not open the case of the Tablet, or the power adapter. When the case is open there is a danger of severe electric shock.
- Do not insert foreign objects through the slots and openings of the Tablet. This may lead to electric shock, electrical short-circuit or fire that will damage your Tablet.
- Operation under extreme environmental conditions can result in damage to your Tablet.
- Do not operate the Tablet during a thunderstorm, in order to avoid damage through a lightning strike.
- Never place objects on top of the Tablet that would exert any pressure on the LCD display.
- An injury hazard exists when the LCD display breaks. Wear protective gloves when handling any broken parts. Wash your hands with soap.
- In order to avoid damage to the LCD display, do not touch it with sharp objects.

Switch off your Tablet immediately or do not switch it on at all and contact the MEDION Help Desk if

- ...the power supply or the connectors attached to it are burnt or damaged. Replace the defective power supply with an original power supply. Under no circumstances may a defective power supply be repaired.
- ...the housing of the Tablet is damaged or fluids have leaked into it. Have the Tablet checked by customer service first as the Tablet may not be safely operated and there may be a life-threatening risk of electrocution!

Ambient Temperature

- The Tablet is most reliably operated at an ambient temperature between +41° F (5° C) and +86° F (30° C) and at a relative humidity between 20% and 80% (without condensation).
- When powered off, the Tablet can be stored at temperatures between +32° F and 140° F (0° C and 60° C).
- Unplug the power during thunderstorms and make especially sure to remove the antenna cables, if present. We recommend the use of a surge protector for additional safety, in order to protect your Tablet from being damaged by power surges or lightning strikes through the power network.
- Wait until the Tablet has reached ambient (room) temperature before turning it on or connecting it to the power adapter. Drastic variations in temperature and humidity can create condensation within the Tablet and may cause it to short-circuit.
- For transporting the Tablet keep the original packing.

Connecting

Pay attention to the following information in order to connect your Tablet correctly:

Power Supply

- Do not open the power adapter housing. When the housing is open there is a danger of severe electric shock. It contains no user-serviceable parts.
- The electric outlet must be in the vicinity of the Tablet and within reach of the power adapter cords.
- To disconnect your Tablet from the power source, or set the Tablet to battery operation, remove the power cord from the Tablet's power socket.
- Only use the Tablet with a power adapter operating at AC 110-240V~/50-60 Hz. For details on power consumption, please refer to the rating plate on the rear of your Tablet. If you are unsure of the type of power supply available at the point of use, ask your local power company.
- Use only the supplied power adapter.
- To detach the power adapter from the mains power supply remove the plug from the power source first and then remove the connector from the Tablet. A reverse sequence could damage the power adapter or the Tablet. Always hold the connector firmly when removing it. Never pull on the power cord.

Cabling

- Arrange cables so that no one can walk on or trip over them.
- Do not place objects on any of the cables.
- Only use power adapter supplied with the Tablet and its devices as the cables have been extensively tested.

Information about the Regulatory Compliance to R&TTE

The following remote equipment has been supplied with this Tablet:

- Wireless LAN
- Bluetooth
- 3G

When used in France, the built-in wireless LAN solution may only be used in buildings due to the capacity of the device (> 100mW).

Currently the other EU-countries and Australia do not have any restrictions.

The company declares herewith that these devices are in agreement with the fundamental requirements and the other relevant terms of the 1999/5/EG Guideline. Complete declarations of conformity are available under www.medion.com/conformity.



N26968

Chapter 2

Views & Handling

Subject	Page
Included with Your Tablet	9
Views.....	10
Front Side.....	10
Rear Side	11
Top Side.....	11
Bottom Side	11
Left Side	12
Getting Started	13


Included with Your Tablet

Please check that the contents are complete and notify us **within 7 days of purchase** if any of the following components are missing:

- Tablet
- AC Adapter with Power Cord (Model: Delta ADP-18TBAC)
- HDMI Adapter Cable
- Headphones
- Instruction Manual
- Warranty Certificate
- Warranty Sticker


Views

Front Side

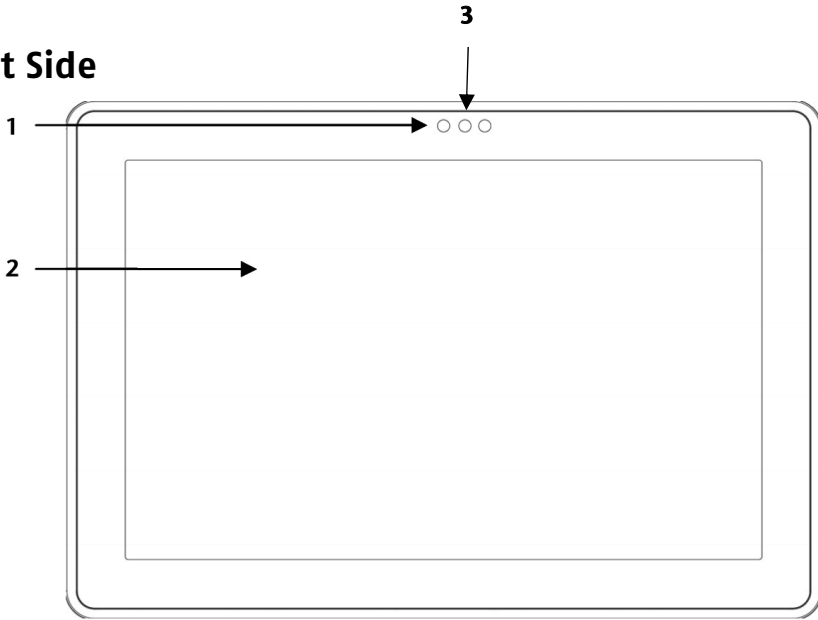

- 1 - Webcam with Microphone
- 2 - Multi-Touch Screen
- 3 - Ambient Light Sensor

Rear Side

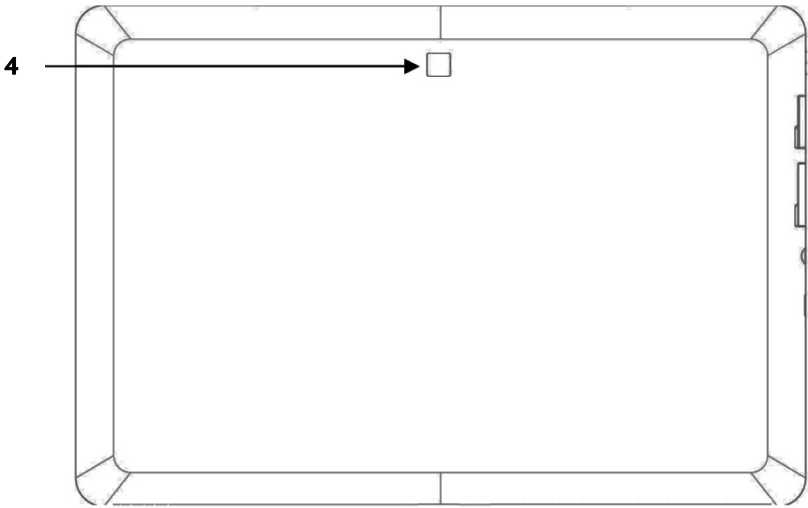


- 4 - Webcam

Top Side




- 5 - Volume Buttons

Bottom Side

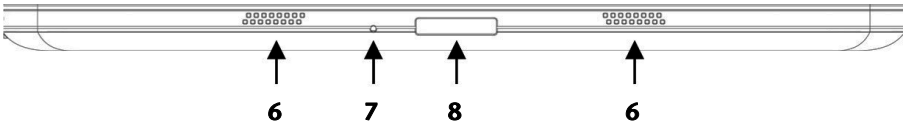

- 6 - Loudspeakers
- 7 - Reset Opening
- 8 - Multi Connector (Power Adapter/HDMI)(⇒ p. 21)

Left Side

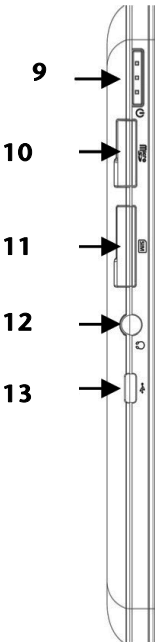

- 9 - Power ON/OFF(⇒ p. 17)
- 10 - microSD Card Slot(⇒ p. 29)
- 11 - SIM Card Slot(⇒ p. 25)
- 12 - Headphone / 4-pin Headset

Caution!

The use of headphones/earphones with a high volume can lead to lasting damage to your hearing. Set the volume to the lowest level before reproducing any sound. Start the sound reproduction and increase the volume to the level that is comfortable for you. Changing the basic settings of the equaliser can also cause damage to the hearing of the listener.



It can cause damage to the hearing ability of the listener if a device is operated through earphones with an increased volume for a long period.

- 13 - Micro-USB Port

Getting Started

Before you get started using your Tablet, first take a few moments to read the important section on **Safety**.

First steps

- Connect the supplied power adapter to the Tablet at the Tablet power socket (8). Connect the power adapter to a free AC power outlet.
- Switch the Tablet on by operating the ON/OFF switch (9). Hold the ON/OFF switch until you feel it vibrate. The Tablet starts and goes through a number of phases.
- If there is a SIM card inserted, please type in your SIM PIN code and confirm with **OK**.

Note

You will find your SIM code in the documentation from your provider.

- After the welcome screen has appeared, select your language and tap **Start**.

Note

The initial installation may take some time to complete.

- Follow the steps on the screen.

Configuring your Google Account

Your Tablet provides you with access to a variety of applications from Google™. You need a Google™ account to use these applications. This account allows you to use a large number of different services, e.g. Google Mail™.

When you first switch on your Tablet, enter the following settings.


1. You can now create a Google™ account (tap on **Create account**).
If you already have a Google™ account, enter your access details and tap **Sign in**.

Note

An Internet connection is required in order to create a Google™ account or to sign in. You can connect to the Internet either via your SIM card or a WLAN connection. Please bear in mind that costs will be incurred for the Internet connection if you do not have a flat-rate contract.

Short Description of the Home Screen



Icon	Description
	Display all Tablet’s apps
	Add widgets and shortcuts
	Back to the home screen
	Back to the previous screen
	Display recent apps
	Time
	Internet connection status
	Battery status
	Menu button Tapping the menu button opens a sub-menu of the used application

Chapter 3

Main Components

Subject	Page
Power Button	17
Operating the Tablet	21
Making/Checking Settings	23
SIM Card	25
Connecting to the Internet	26
The microSD Card Slot.....	29

Power Button

Powering On your Tablet

1. Press and hold the ON/OFF button on the upper left side for about 2-3 sec. until you feel the vibration to power on the Tablet.

Powering Off your Tablet

1. Press and hold the ON/OFF button on the upper left side until the following message appears on the screen: **Would you like to shut down?**
2. Tap **OK** to power off your Tablet.

Setting the Tablet into standby mode



In sleep mode, your device will be placed into a low-energy standby mode with the display turned off in order to save battery power. If there is no operation within a preset time, the screen backlight will automatically turn off, and the device will be locked.

If your Tablet is powered on and you do not use it temporarily, you can press the ON/OFF button quickly to dim the display. The device will then enter the standby mode and become locked.

You can adjust the preset time under **Settings > Screen > Timeout**.

Waking up from Standby Mode

1. While the screen display is off, press the ON/OFF button quickly to re-illuminate the screen.
2. Toggle the button to unlock the screen orientation, allowing screen rotation.

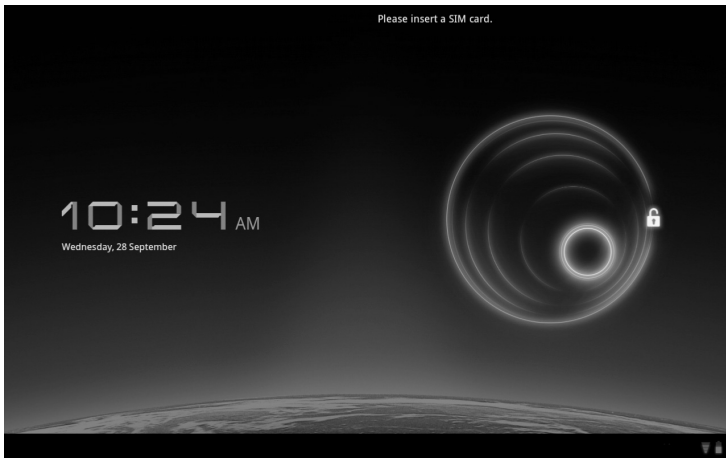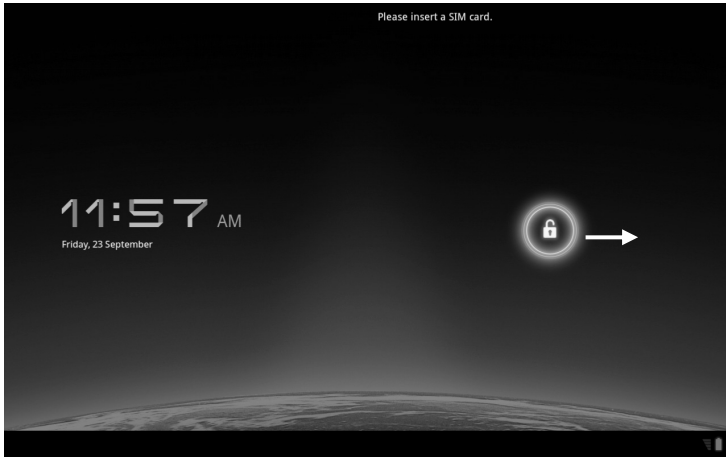

Adjusting Screen Lock Pattern Settings

You can adjust the screen lock pattern settings under **Settings** ⇒ **Location & security** ⇒ **Configure Lock Screen**.

Auto Shutdown

By default the Tablet shuts automatically down after 4 hours in standby mode. Under **Settings** ⇒ **Applications** ⇒ **Auto shutdown** you can adjust this time.

Power Adapter

Your Tablet is supplied with a universal AC power adapter, which automatically adjusts to the available power source. The following levels are supported: **AC 100-240V~/50 - 60 Hz**. Please follow the power supply **safety instructions** found on page 3.

The power adapter must be connected to a power outlet. The power lead from the power adapter connects to the Multi Connector (8) on the **bottom** of the Tablet (see also **Multi Connector** on page 21).


The adapter provides the Tablet with power and also charges the battery. The battery is also being charged when you are working on your Tablet with the power adapter connected. The power adapter is still receiving power even when your Tablet is not connected to it. You should therefore unplug the power adapter from the outlet if it is not connected to the Tablet.

Warning!

Only use the power adapter supplied with your Tablet.

How to Assemble the Power Adapter

1. Put the plug onto the adapter (❶) as shown below. The plug fits only in one direction.
2. Turn the plug clockwise (❷) until it engages audibly.

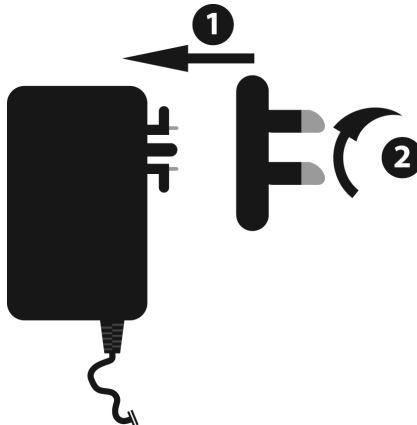

Battery Operation

Note

Please charge and discharge the new battery completely two to three times in succession. Only then will it achieve its full performance level!

Batteries store electrical energy in their cells and then deliver it when needed.

The useful life and performance of your battery will depend on careful handling.

The battery should be completely discharged before a charging process and completely charged again in order to optimise its useful life and its performance.

Charging the Battery

The battery is charged via the power adapter. If the power adapter is connected, it charges the battery automatically, no matter if the Tablet is turned on or off. If the Tablet is switched on, the charging process takes a significantly longer time.

Note

The charging process will be interrupted if the temperature or the voltage of the battery is too high.

Multi Connector

Using the Multi Connector (8) at the bottom of the Tablet you can

- Charge the battery with the supplied power adapter or
- Use the HDMI Adapter Cable to connect your Tablet to the TV.

Note

When playing videos from your Tablet PC on a TV the volume can only be adjusted on the TV.

Operating the Tablet

You operate your Tablet with your fingertips. Do not use any pointed or sharp-edged objects.

- Tap on the display to select apps or to open applications.
- Tapping and holding your finger on an input field will cause any available advanced input options to be displayed.
- Drag your finger over the display to move it up, down, right or left.
- To move an app on the display, tap and hold on it for a few seconds, then drag it to the desired position.
- Drag two fingers apart on the screen at the same time or tap twice on the display in order to increase/reduce the size of a website.

Note

You can view the display in portrait or landscape format. Simply hold the tablet upright and turn it to the desired orientation to do this. The screen contents will rotate automatically.

Switching Home Screens

Your Tablet has multiple home screens.



You can slide the screen with your fingers or switch the display and move icons among the home screens.

Making/Checking Settings

To change or display your Tablet settings, tap on **Settings**.

Icon	Menu name	Description
	Wireless & networks	Configure and administer your wireless connections, e.g. WLAN, Bluetooth®, mobile networks. Approve data connections and virtual private networks. You can also select the flight mode here.
	Sound	Configure the sound settings, e.g. ring tones and notifications
	Dolby Mobile	Turns ON/OFF Dolby Mobile and adjusts settings for music and video equalizers
	Screen	Configure display settings, e.g. brightness.
	Location & Security	Create your unlock pattern, define the SIM lock or memory management for the registration information on your mobile device. Under My Location you can also select the sources that are to be used for determining your location.
	Applications	Manage your applications and install new applications.
	Accounts & sync	Manage your accounts and configure the synchronisation settings.
	Privacy	Configure the data protection settings, e.g. backup, restoration and personal data.
	Storage	Check the available memory on an inserted microSD card and the internal device memory.
	Language & input	Set the operating system language and region, as well as the text input options.

Icon	Menu name	Description
	Accessibility	Select the input assistance options after the installation of input assistance applications.
	Date & time	Set the date, time, time zone and date/time format.
	About tablet	Display the mobile network status, battery level and legal information. You can also search for system updates.

Market

As your Tablet is based on the Android platform, you can expand its functions by installing

additional applications. The Android market  offers a simple way to get games and other mobile applications.

Note

Accessing the Android market requires you to be connected to the Internet and have a Google account (see page 13).

Using Non-Market Applications

If you want to install applications which are not downloaded via the marketplace, tap the tick box to enable this option. By default this option is not ticked.

Note

Using non-market applications can be risky and may damage your device.

SIM Card

You choose the network provider, telephone network and tariff when purchasing a SIM card. Therefore, check out which tariff from which network provider is best suited to your mobile data usage before purchasing the SIM card.

- Store all SIM cards out of the reach of small children.
- Handle your SIM card carefully because the card and its contact points can be easily damaged through scratching or bending.


Insert the SIM card carefully into the card bay with the contacts pointing downwards i.e. backwards. The card must lock easily.

Inserting SIM Card

Attention!

Always ensure that the Tablet is switched off when carrying out this process to avoid any damage to the device or the SIM card.


1. Slide the SIM card into the relevant slot. Insert the SIM card with the contacts facing downwards and the bevelled corner at the top right.

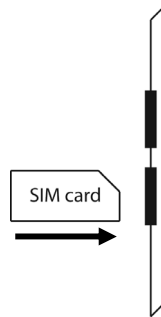

2. Follow the instructions on the screen and enter your PIN code.
3. The message **Unlocking SIM card** appears.

Connecting to the Internet

Main Settings

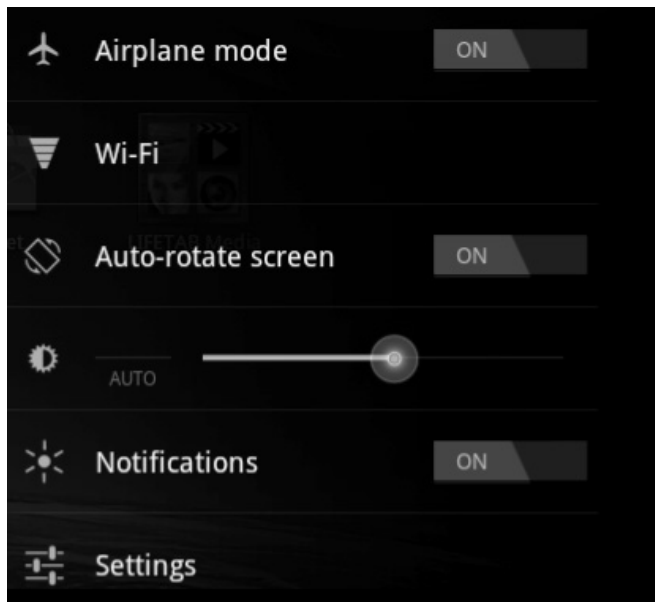

You can use the standard connection settings to access the Internet via your mobile network (GPRS/3G/EDGE) or use your WLAN connection.

In order to access the Internet via GPRS/3G/EDGE, an appropriate service must be active in your contract. Please contact your service provider if the GPRS/3G/EDGE settings are not preconfigured.

Adding a New GPRS/3G/EDGE Connection

Before you start, you should first ask your service provider for the following information:

- Name of the access point (APN)
 - If required, your name and your password
 - Server IP and port number, if the network uses a proxy server
1. Tap on **Apps** ⇒ **Settings**.
 2. Tap on **Wireless & networks** ⇒ **Mobile networks** ⇒ **Access Point Names**.
 3. Select the desired **APN** server provided by your mobile operator.
 4. If there is no **APN** configured by your mobile operator, tap the icon in the upper right corner, and then tap on **New APN**.
 5. Enter the necessary values for the new **APN**.
 6. When finished tap on . Your new **APN** is saved.
 7. Tap on the desired **APN** to select it.

Attention!

You can restore the default APN entries that were originally saved on your SIM card by pressing the icon in the upper right corner and choosing the entry "Reset to default".

Activating/Deactivating 3G

The 3G function can only be enabled/disabled via the Airplane mode.

1. Tap on the lower right corner of the taskbar and then on  **Settings**.
2. Tap on **Airplane mode** and then activate the 3G function by tapping **on** or **off**.

Activating/Deactivating Wi-Fi

Warning!

Make sure the Wireless LAN option is switched OFF in any environment where it might interfere with critical and sensitive devices, e.g. on aircraft, in hospitals and other medical centres, etc.

3. Tap on **Apps** ⇒ **Settings**.
4. Tap on **Wireless & networks**.
5. Tap on **Wi-Fi/3G**, to enable/disable this function.

Adding Wi-Fi Network

1. Tap on **Apps** ⇒ **Settings**.
2. Tap on **Wireless & networks** ⇒ **Wi-Fi Settings**.
The descriptions for the WLAN network and the relevant security settings (open or secure) that have been detected by your Tablet are displayed under **Wi-Fi networks**.
3. Tap on the network to which you want to connect.

Note

If you attempt to make a connection to a secure network, you will be required to enter a password to gain access.

The microSD Card Slot

Memory cards are media that are being used for a variety of purposes, especially in digital photography. The form and capacity of a memory card can vary according to the manufacturer. Your Tablet supports the microSD format.


Inserting microSD Cards

Note

Memory cards can only be installed in one direction.

Incorrect insertion of a card can cause damage to the card reader and/or the card.

1. Insert the memory card carefully into the card bay with the contacts **pointing downwards** i.e. backwards. The card must lock easily.

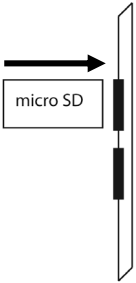

In the taskbar you will see an icon that shows the SD card is inserted.

Accessing the microSD Card Contents

To access the SD card you either can use the application the **ES file explorer** or another application of your choice (i.e. LIFETAB Media) to play music or watch photos from the SD card.

1. Open the **ES file explorer**.
2. Press the home button in the upper left corner.
3. Select **Ext-memory folder** to access data from the SD card.

Removing microSD Cards

1. Tap on the SD card icon in the taskbar and then tap on the eject button on the right hand side to remove safely the SD card.
2. To remove the memory card pull it out and remove it.

Chapter 4

Help

Subject	Page
Customer Service	33
Repairs.....	33
Recycling and Disposal	34

Customer Service

Additional Support

Please contact the MEDION Help Desk on 1 300 884 987 and we will attempt to help you solve the problem. Before you call, however, please have your proof of purchase at hand and the following information available:

- What is the MD Number of your product?
- What messages, if any, appear on your screen?
- What steps have you already undertaken to solve the problem?
- Can you manually repeat the problem?
- If you have been given a customer number previously, please have this available.

Maintenance

Warning!

There are no user-serviceable or user-cleanable parts inside the Tablet housing. Never open the Tablet housing.

Following these measures can extend the lifetime of your Tablet:

- Before cleaning, always remove the power adapter plug and all connecting cables.
- Only use a damp, lint-free cloth to clean the Tablet.
- Do not use any solvents, corrosive or gaseous cleaning agents.

Repairs

- Only a MEDION authorised repairer should perform repairs to your Tablet.
- Please contact the Help Desk if you are experiencing technical problems with your Tablet.
- Please contact our authorised Help Desk exclusively in the case of a necessary repair.

Recycling and Disposal



Device

At the end of its life, the appliance must not be disposed of in household rubbish. Enquire about the options for environmentally-friendly disposal



Batteries

Do not dispose of used batteries in the household rubbish! They must be deposited at a collection point for used batteries.



Packaging

To avoid damage during transport, the Tablet is stored in packaging. Packaging is produced mostly from materials which can be disposed of in an environmentally friendly manner and be professionally recycled.

Should you have any questions concerning the disposal please contact your dealer or MEDION Customer Service.

Chapter 5

Appendix

Subject	Page
Information about Conformity.....	37
Index	40

Information about Conformity

The device fulfils electromagnetic compatibility and electricity safety requirements. Your device complies with the basic requirements and the relevant Australian EMC guidelines [electromagnetic compatibility] and the Australian electrical safety guidelines. This device fulfils the basic requirements and the relevant regulation of the Ecodesign Guideline 2009/125/EG (Commission Regulation 1275/2008).




ISO 13406-2 Class II

There have been several attempts in the past to define the acceptable number of defective pixels. But this can be difficult and varies widely between different manufacturers.

We, therefore, adhere to the clear and strict requirements of **ISO 13406-2, class II**, for the warranty handling of all LCD display products. These requirements are summarised below.

Within ISO-standard 13406-2 the general requirements regarding pixel defects are defined. Pixel defects are classified into three failure types and four failure classes. Each individual pixel is made up of three sub-pixels in the primary colours (red, green, blue).

Pixel structure

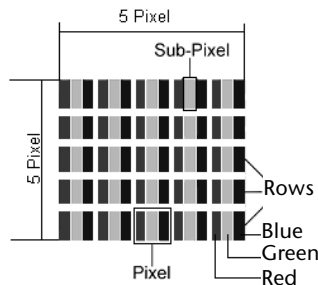

Types of Pixel Failures:

- **Type 1:**
A constantly lit pixel (a bright, white spot), even though it is **not** addressed. A white pixel is caused when all three sub-pixel are lit.
- **Type 2:**
A pixel that does not light up (dark, black spot), although it is addressed
- **Type 3:**
Abnormal or defective red, green or blue sub-pixels.
(E.g. constantly lit with half the brightness, one colour is not shining, blinking or flickering, but not belonging to Type 1 or 2 Pixel Failures)

In addition: A cluster of type 3 (= 2 or more defective sub-pixels in an array of 5 x 5 pixel).
A cluster is an array of 5 x 5 pixel (15 x 5 sub-pixel).

ISO 13406-2, Class II

Resolution	Type 1	Type 2	Type 3	Cluster Type 1, Type 2	Cluster Type 3
1024 x 768	2	2	4	0	2
1280 x 854	3	3	6	0	3
1280 x 1024	3	3	7	0	3
1366 x 768	3	3	7	0	3
1400 x 1050	3	3	8	0	3

Example:

A 17" (44 cm) - SXGA-display consists of 1280 horizontal and 1024 vertical picture dots (pixel), which amounts to a total of 1,31 million pixels. Based on one million pixels this translates into a factor of about 1.31.

Class II type failure consequently allows for three defects each of type 1 and type 2 and 7 defects of type 3 and 3 cluster of type 3.

These cases are normally not covered by warranty.

If the number of failures exceeds the figures of any category mentioned above then this may be covered by the warranty.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

Copying This Manual

This document contains legally protected information. All rights reserved. Copying in mechanical, electronic and any other form without the written approval of the manufacturer is prohibited.

Index

A

Adding a New GPRS/3G/EDGE Connection.....	27
Ambient Light Sensor	10
Ambient Temperature.....	4
Auto Shutdown	19

B

Battery Operation	
Charging	20

C

Cabling.....	5
Charging the Battery.....	20
Configuring your Google Account.....	13
Connecting to the Internet	26
Customer Service.....	33

D

Description of the Home Screen	14
--------------------------------------	----

F

FCC Compliance Statement.....	39
-------------------------------	----

G

Getting Started	
Configuring your Google Account..	13
First Steps	13

H

Headphone / 4-pin Headset.....	12
--------------------------------	----

I

Included with Your Tablet PC	9
Information about Conformity.....	37
Internet	
Main Settings.....	26
ISO 13406-2 Class II.....	37

L

Loudspeakers.....	11
-------------------	----

M

Main Operation.....	19
Maintenance	33
Making/Checking Settings	23
microSD CardSlot	29
Micro-USB Port.....	12
Multi Connector.....	11, 21
Multi-Touch Schreen.....	10

N

Non-Market Applications	24
-------------------------------	----

O

Operating	21
-----------------	----

P

Power Button	17
Power Supply	
Main Operation.....	19
Battery Operation.....	20
Powering off the Tablet PC.....	17
Powering on the Tablet PC.....	17

R

R&TTE.....	6
Recycling and Disposal	34
Repairs	33
Reset opening	11

S

Safety Instructions.....	3
Ambient Temperature	4
Cabling	5
Maintenance	33
Power Supply.....	5
Upgrades and Repairs	33
Screen Lock Pattern Settings	18
SIM Card	25
SIM Card Slot.....	12
Standards	
FCC Compliance Statement	39
Standby Mode	17

	41
Support	33
Switching Home Screen.....	22
U	
Upgrades and Repairs	33
V	
Views	
Bottom Side.....	11
Front Side	10
Left Side	12
Power ON/OFF	12
Rear Side	11
Sim Card Slot	12
Top Side.....	11
Webcam with Microphone.....	10
W	
Wi-Fi	27, 28

Safety

Handling

Components

Help

Appendix



MEDION Australia Pty Ltd
St Leonards, NSW 2065
Australia

Hotline: 1300 884 987
Opening hours: Mon – Fri 08:30AM to 06:00PM EST

Internet
www.medion.com.au
E-mail Support
australia@medion.com